


# Mail Chime<sup>tm</sup>


## How It Works

When the mailbox door is opened, the Receiver in the house will buzz four times and display a red LED light. After you retrieve your mail, press the reset button for one second to reset.

## Package Contents

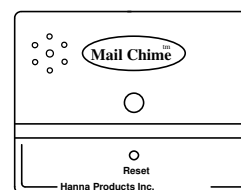


Receiver

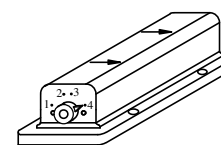

Sensor


12 volt, A23 battery ( included)

Battery can be purchased at most drug stores and battery stores.

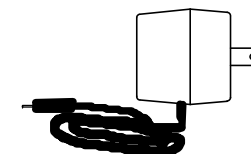


AC adaptor


1. Remove top case by removing four screws.

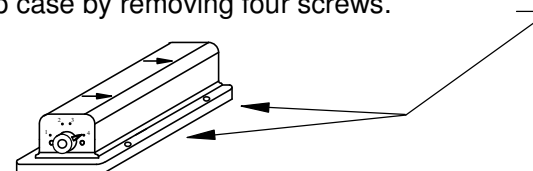

2. Hold down on battery and pull plastic strip from battery holder.

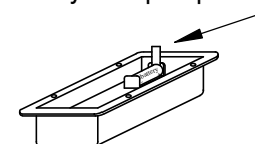


 3. Reassemble the case using the 4 screws.
4. Refer to [page 2](#) and set the dial setting for your type of mailbox.
5. Peel the protective cover off the double faced tape on the bottom of the Sensor and attach the Sensor to your mailbox. Note the direction of the arrows.




6. Plug the AC adaptor into the back of the Receiver and the wall outlet.  
**The receiver will not beep and the LED bulb will not light until you open your mailbox door.**

7. Straighten the antenna vertically.

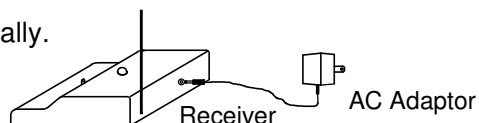


8. **After you retrieve your mail - do not press down on the reset button for more than 1 to 2 seconds.**


## Curb Side

 


Set dial on # 4 - Mount with arrows on Sensor pointing up towards the top of the mailbox door.

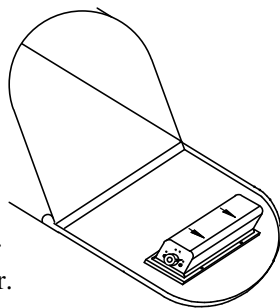


## Wall Mounted

 


Set dial on # 3 - for mailboxes with large tapered lids.  
Mount with arrows on Sensor pointing up.  
Set dial on # 2 - for mailboxes with short tapered lids and flat tops  
Mount with arrows on Sensor pointing up.

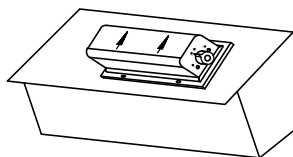

## Slot Type

 

Set dial on # 4 - Mount with arrows on Sensor pointing up towards hinge.

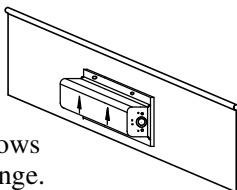

## Trouble shooting

1. Be sure you removed the plastic strip in front of the battery.
2. Check if you mounted the Sensor correctly on your mailbox.
3. Check if the battery is installed correctly.
4. Try moving the Receiver to a new location in your home.
5. If your unit should ever quit, or it beeps randomly, please use the re-code procedure shown below.
6. **Please call 309-788-1982 for any questions.**

Generally when the Mail Chime does not work or it beeps randomly, it is because the reset button on the receiver was held down for more than 3 seconds. If this should ever happen, please call Hanna Products at 309-788-1982 or follow the procedure shown below.

## Procedure for Re-coding

1. Remove the transmitter from your mailbox by removing the four screws.
2. Place the transmitter down on a surface next to the receiver so that the battery is shown up.
3. Hold the reset button down for 6 seconds. Then let up on the button and immediately turn the transmitter over so the battery is facing down.
4. You should hear 2 quick beeps followed by 4 long beeps. If you hear these sounds, then you have successfully re-coded your Mail Chime.

FCC ID: RNCMAIL-1200

This device complies with Part 15 of the FCC rules. Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. CAUTION: Changes or modifications not expressly approved by the party responsible could void the user's authority to operate this equipment.

Patent Pending  
Designed in USA  
Made in China

Hanna Products Inc.  
2602 37th Street, Rock Island, IL 61201  
Phone (309) 788-1982 Email: hanna@hannaproducts.com