

- \* Don't dispose of batteries in a fire
- \* Dispose of batteries according to local regulations (Ex. Recycling).
- \* Don't dispose as household waste
- \* Replace the Battery if Red Indicator is glowing with out Buzzer sound.

At First usage Unscrew the back lid of the **GasWatch-II** Display and insert the battery which comes with product shown in the figure.



YELLOW LED on the display:

RED LED on the display

alarm (Buzzing sound):

0

LAY	LEAK DETECTION:
tick the display on grill Idhesive velcro sticker	<ul> <li>Note : Never use LP gas without testing for leaks in the system</li> <li>* Turn OFF the gas supply at the cylinder</li> <li>* Turn OFF all appliance burner controls</li> <li>* With the appliance burner control(s) in the OFF position, turn gas cylinder valve ON. This pressurizes all lines to appliance(s).</li> </ul>
nale connector coming actor available with the	<ul> <li>Now the gauge should provide the tank level reading.</li> <li>If it still does not indicate the tank level, you are out of gas</li> </ul>
atch-II	Watch the needle position on the gauge. Wait for around 3 seconds and then CLOSE the cylinder valves. The <b>GasWatch-II</b> now monitors pressure between the cylinder and appliance. Any leaks in line between the cylinder an appliance will be indicated by the needle movement towards Red Color
hile cooking GasWatch-II shows ne left for cooking.	<ul> <li>If you find leak - DO NOT USE GAS</li> <li>To detect a leak, apply soap solution to all connections and look for bubbles. An expanding bubble or bubbles indicate you have a leak.</li> <li>Repair all leaks prior to using gas cylinder or appliance. Retighten Where bubbles appear, recheck for leakage using soap water solution.</li> <li>If bubbles persist - you still have a leak - STOP - DO NOT USE the propane cylinder or appliances(s). Have a qualified propane service person recheck your propane appliances.</li> </ul>
( UNIT	
	EMERGENCY FLOW LIMITER (EFL)
	EFL will be activated in case any major leakage due to
	rapture of tube. Once this problem is rectified by repairing
	or replacing the damaged part and connecting again will reset the EFL in TVL 212 E automatically
e. u finish your cooking.	
- FULL GAS	HANDY HINTS:
- ON BUTTON	Before starting connections make sure all gas controller <b>ON/OFF</b> knobs are turned off on appliance, then turn on gas supply.
LOW GAS	Lean the <b>GasWatch-II</b> at a slight angle to avoid rainwater from entering the device.
OFF BUTTON	If condensation forms under the gauge dial, take the <b>GasWatch-II</b> off and place indoors until the condensation dries out then replace back on the system.
REFILL	WARNING
	Each time you finished using your Propane equipment; make sure to always turn off the gas supply.
There is plenty of gas	WARRANTY
Early warning of low	<b>TVL International</b> Warrants your <b>GasWatch-II</b> Adaptor to be free from defect in materials and workmanship for one year from the original purchase date. Should the product have a defect in materials or workmanship, we will repair or replace it without charge to you. A shipping and processing fee may apply. To obtain services under warranty, simply contact our Customer
gas in tank	Service Center at www.gaswatch.com or Phone at (704) 845 9458
Tank should be refilled to avoid running out of gas while cooking	This warranty does not cover any damage caused by accident, misuse or any use intended and described in this owner guide, or damage resulting from failure to maintain this product as specified in the manual.