


# HA360MK

## Quick Reference and Installation Guide


### 1 Setting Up Your HomeAware™

1. Remove all contents of the box.
  - HomeAware™ - Main Unit
  - Doorbell Transmitter
  - Doorbell Chime Box Connector Cord
  - Vibrator / Bed Shaker
  - Telephone Line Cord
2. Plug the power supply into back of the Main unit, 7.5V 2A DC IN.
3. Plug Main unit power supply into a 120V outlet.
4. Plug Vibrator/Bed Shaker into the vibrator outlet on the back of the Main unit. (Optional)

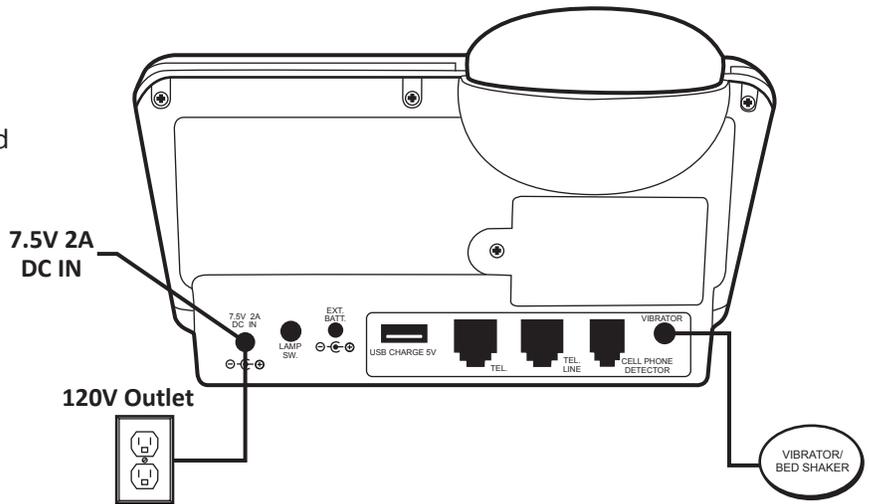


### 2 Setting Time of Day

1. Press the **Time Set** button. Blinking red dots will show on the display.
2. Press the **Hour** and **Minutes** buttons up or down to set desired time. When setting the time make sure the PM indicator light reflects the correct time.
3. Press the **Enter** button to complete.

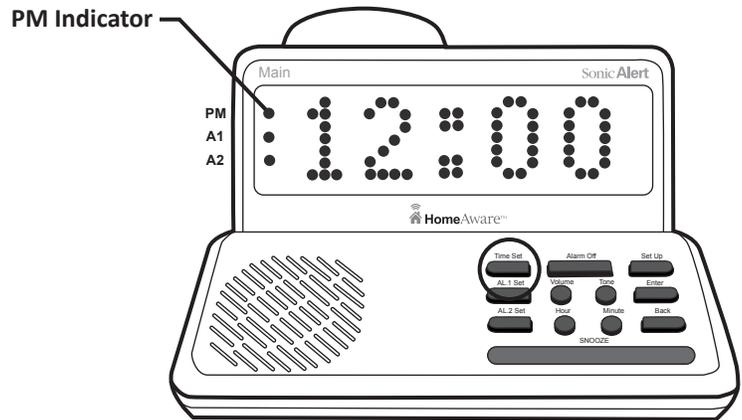

### 3 Setting Alarm 1

1. Press and hold **AL.1 Set** button. Blinking red dots will show on the display.
2. Press the **Hour** and **Minute** buttons up or down to set desired alarm time.
3. Press the **Enter** button when done to complete. A red LED Alarm indicator light will appear on the display's left side indicating alarm 1 is now set.
4. Repeat for AL.2.

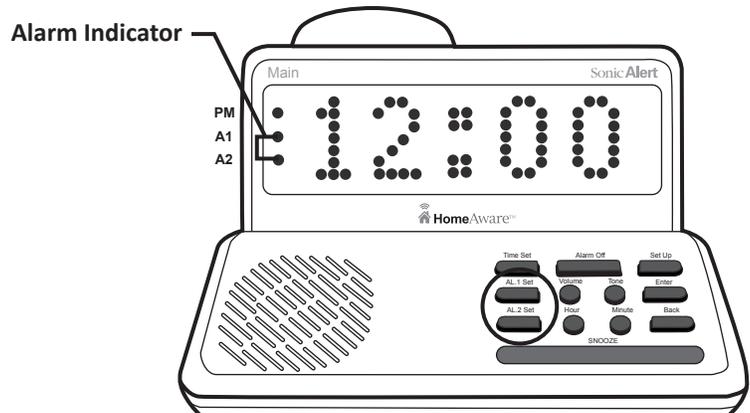


## HA360MK

### Quick Reference and Installation Guide

#### 4 Setting Up Your Doorbell Transmitter


1. Install provided batteries into the bottom of the unit.
2. Once installed push the link button and the red LED light will light. If the light does not show, you may have the batteries in backwards.

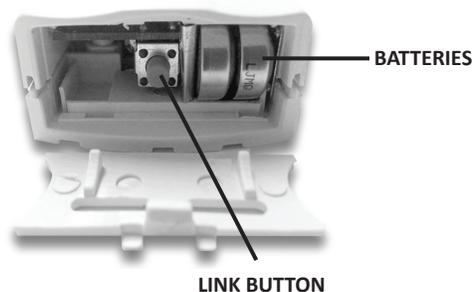

#### 5 Linking Doorbell Transmitter to Main Unit

Do the LINK procedure in the same room as the Main Unit.


1. Press **Set Up** and LINK will be shown, press **Enter** the word LINK will begin blinking.
2. Press link button on the bottom of the doorbell transmitter. The red LED light on front of the doorbell transmitter will blink two times and DOOR will be shown, press Enter.

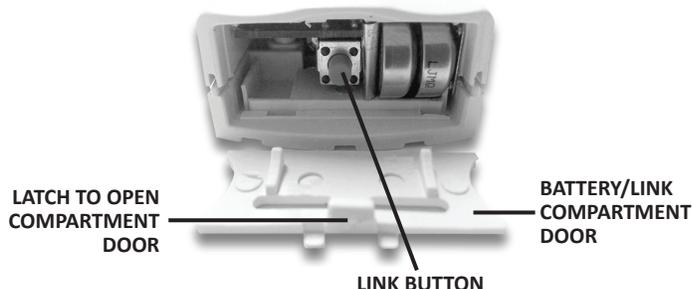

#### 6 Installation and Set Up of Doorbell Transmitter

There are two methods to install and set up.

1. Stand-alone no existing chime box. See page 26 of User Guide.
2. To existing chime box. See page 29 of User Guide.

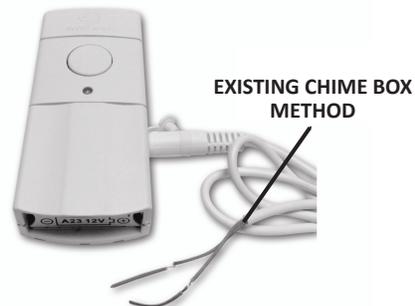

#### 7 Installing a Telephone Line to the Main Unit

1. Place the Main unit close to a standard RJ11 telephone wall jack.
2. Plug the phone line cord into the wall jack.
3. Plug the opposite end of the phone line cord into the back of the Main unit, TEL LINE.
4. To hookup a standard telephone plug the phone jack into the back of the Main unit, TEL.
5. To charge your smartphone, plug into the USB CHARGE 5V.

