

WaterCop[®] CLASSIC by DynaQuip

Owner's Manual/ Installation Guide



Index

Owner's Manual	2	Installation Guide	7
System Description.....	2	Pre-Installation Testing of WaterCop®.....	7
System Components.....	2	Manually Test the Valve.....	8
General Safety Information.....	4	Manually Test the Flood Sensors.....	8
How the System Works	4	Troubleshooting	9
Selection of WaterCop® Installation Sites	4	Installation of Flood Sensor	9
Placement of Flood Sensors.....	5	Installation Procedure	9
Suggested Locations.....	5	Review Location and Type of Main Supply Line	9
Flood Sensor Battery Life	5	Additional Part Requirements	10
Operating the WaterCop® CLASSIC System.....	5	Compression Fittings	10
WaterCop® Specifications	6	Solder Fittings.....	11
FCC Information.....	6	Electrical Connection.....	11
Additional Components Available for Your WaterCop® CLASSIC System.....	7	Warnings and Precautions.....	11
Single and Dual Probe WaterCop Flood Sensors .	7	Changing Digital Codes	11
Low Temperature Sensor	7	Changing the Receiver Code	11
Water Control Wall Switch	7	Changing the Transmitter Code	12
AC Power Adaptor	7	WaterCop® Interface Connections.....	12
WaterCop®/Wall Switch Interconnect Cable.....	7	Emergency Procedures.....	12

System Description


The WaterCop® CLASSIC System is designed to detect leaks in your plumbing system at predetermined locations, and automatically shut off the water supply to help effectively reduce the chance of major water damage associated with a leak.

System Components

The WaterCop® CLASSIC System is composed of two basic parts:

- A motorized ball valve that houses a wireless radio receiver which automatically turns off your water supply when any flood sensor detects water or low temperature sensor detects potential freezing.
- Flood sensors, which detect water from a leak or overflow, house a wireless radio transmitter that sends a signal to the WaterCop® to turn off your water supply.

WaterCop® CLASSIC System

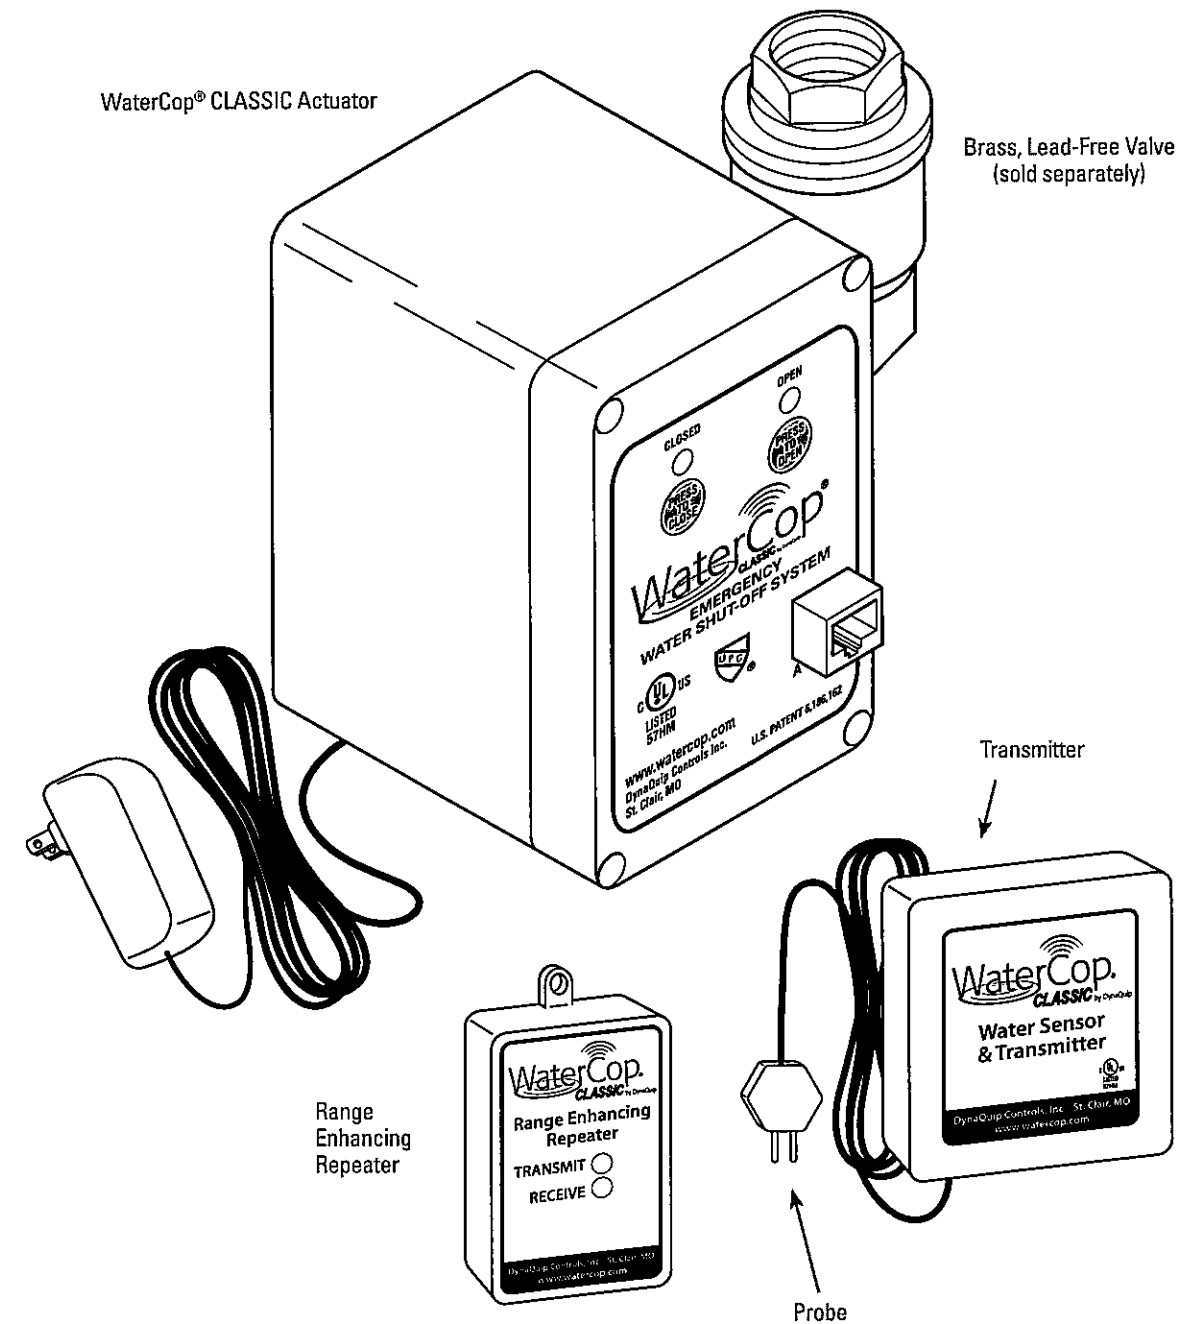

General Safety Information



Do not apply electrical power to the unit unless the unit is fully assembled (as it shipped). Failure to do so could result in personal injury and/or damage to the unit. Disconnect power source before working on or servicing the unit. Failure to do so could result in personal injury.



Caution: It is strongly recommended that eye protection be worn while servicing the system. Failure to do so could result in personal injury.


DO NOT USE EXTENSION CORDS. KEEP FINGERS AND OBJECTS AWAY FROM THE VALVE.

How the System Works

Flood sensors constantly monitor their selected areas for accumulating moisture. When a leak is detected, a sensor will send a radio frequency signal to the WaterCop® unit instructing it to shut off the water supply to the home. The WaterCop® valve will remain closed until it is manually reset.

The flood sensors are a battery powered device enabling it to be located anywhere a leak is likely to occur, or where water might cause damage.

The WaterCop® requires household electrical power (120 VAC outlet) and will not operate during a power outage unless receiving auxiliary power from a backup device such as an uninterruptible power supply unit (UPS). Additionally, the use of a certified surge protection device is highly recommended.

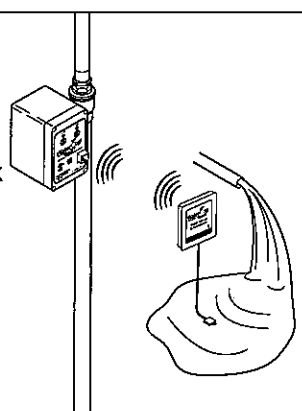

Selection of WaterCop® Installation Sites

The WaterCop® valve should be installed in the main water line just downstream from the main shut-off valve in your home. The **front control panel** of the WaterCop® should be easily visible in order to see what position the valve is in (open/closed). It should also be easily accessible for resetting after a leak has been detected and the water supply has been shut off. While the WaterCop® is completely supported by the piping in your plumbing system when it is installed, placement of the valve should ensure that the housing is protected from use as a step or from other excessive loads.


The WaterCop® requires household electrical power, and the provided power adaptor must be plugged into a 120 VAC power source. Do not use an extension cord. As with all sensitive electric equipment, the use of surge protection is highly recommended.

The shut-off valve must be installed indoors:

- In the main water line;
- In place of or just downstream from the main water shut-off valve;
- In a dry location;
- Where it is accessible for checking and resetting the valve and for resetting the radio receiver code, if necessary;
- Where the case is protected from use as a step or from other excessive loads.

Local electrical and plumbing codes should be consulted to ensure that the installation is in complete compliance. (See Installation section for details.)

Notice: WaterCop® should be installed downstream of existing shut-off valves and pressure reducers. Install 18" downstream from existing indoor water meters to allow for future meter maintenance.

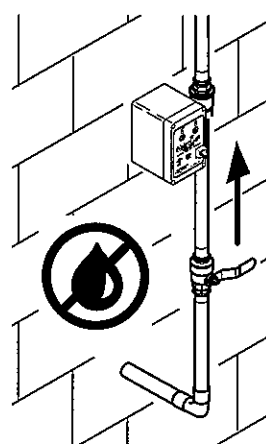

Placement of Flood Sensors

Each WaterCop® Classic System can support an unlimited number of wireless flood sensors. Additional sensors may be added at any time. A sensor consists of a transmitter (a rectangular box) and a sensor probe (a small disc at the end of the wire, with two short gold prongs protruding from one side). Flood sensors should be placed in locations where leaks are most likely to occur.

Suggested Locations


- Washing Machines
- Dishwashers
- Kitchen Sinks
- Bathroom Sinks
- Pipes that are prone to freezing (freeze sensors are also available)
- Toilets
- Icemakers/Refrigerators
- Automatic Humidifiers
- Water Heaters

The transmitter in the flood sensors and the receiver in the WaterCop® communicate by radio frequency. The smaller the distance between them, the stronger the signal will be. The maximum transmission distance is somewhat dependent upon the building layout and type of construction, but will be in the 150'-200' range. The transmitter (attached to the sensor) must be kept dry. It is NOT splash proof. Sensors should never be placed outdoors. The sensor probe detects the water from a leak and is completely waterproof.

Sensor probes should be placed on the floor or in areas where water would tend to accumulate rapidly in common leak or overflow situations.

Make sure that any water from a leak will drain toward the sensor probe, not away from it. Avoid high traffic areas where the cord or sensor could be stepped on or kicked and where children or pets may disturb it.

The sensor probe should be placed FLAT on the floor so water can be detected as soon as it begins to accumulate. The sensor probe may be secured to the floor with adhesive dots (supplied). Do not use hook and loop fasteners to secure sensor to floor as this will raise the probe too high above the floor. To avoid damage to transmitters and to provide for the strongest signal possible, the transmitter portion of the flood sensor should be mounted in a convenient location (on the wall, in a cabinet, closet, etc.) two to three feet above the floor. (See Installation section for details on sensor installation.)

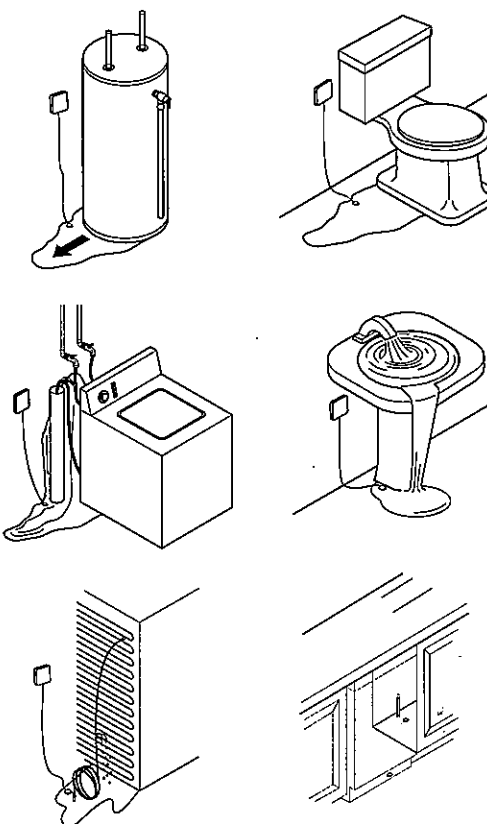

Flood Sensor Battery Life

Fresh, high quality "AA" alkaline batteries are recommended. Assuming the sensor has not detected and transmitted a leak condition (standby mode); high quality "AA" alkaline batteries should last between three to five years.

Sensors will sound an audible "chirp" sound when batteries are low. Replace batteries when low or during periodic maintenance to ensure proper power and function. Re-test each unit in its regular location (see Installation Manual).

Operating the WaterCop® CLASSIC System

The normal position of the valve is open to allow full flow throughout the plumbing system. WaterCop® is a full port ball valve which does not restrict the flow capacity of your plumbing system. The indicator lights on the face of the WaterCop® will show the position of the valve.

If the valve is in the closed position (the red light will be lit), press "OPEN" and the valve will move to the open position (green indicator will light).


When water comes in direct contact with a flood sensor, an RF (radio frequency) signal is transmitted to the WaterCop® and the valve closes, turning off the water source to protect the building from additional water damage.

The red indicator light will signal that the valve is now in the closed position, and that you need to check all areas where you have placed a sensor to determine what plumbing product caused the system to activate.

The valve will remain closed until the unit is manually reset on the WaterCop® panel. After the plumbing problem is fixed, reset the WaterCop® by pressing "OPEN" (green circle) on the face of the WaterCop®. Valve will open and green indicator will be lit. See illustration at right.

Note: If major repairs are needed to correct the plumbing system, it is recommended that the manual shut-off valve upstream of the WaterCop® also be closed during the repairs. Close the main water shut-off valve and unplug the WaterCop® before making repairs on the plumbing system.

Note: In case of a power failure, the WaterCop® cannot operate. If the power is out, you will need to use the manual shut-off valve to turn the water off in case of an emergency. When power is restored, the WaterCop® will remain in its last known position indicated by the red or green lights on the face of the unit.

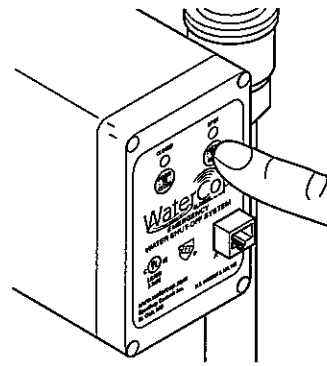

WaterCop® Specifications

Actuator

Max. working pressure	125 PSIG
Ambient temperature	35° to 105° F
Enclosure	Polycarbonate
Voltage	12 VDC includes 120 VAC adaptor
Current	0.85 AMPS (Full Load)

Accessories

Sensor Signal Repeater	120 VAC 47mA
Sensors	3 VDC (2AA Batteries) 10mA

Valve

Valve	Full-Port, Lead-Free Brass, NPT
Valve Seals	RTFE (Reinforced Teflon)

Flow Data

Valve Size Cv = Gpm flow @ 1 PSI pressure drop	
1/2" NPT	19
3/4" NPT	34
1" NPT	52
1-1/4" NPT	77

For cold water applications

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiver;
- Increase the separation between the equipment and receiver;
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- Consult the dealer for help.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



Caution: The user is cautioned that changes and modification made to the equipment without the approval of the manufacturer could void the user's authority to operate this equipment.

Additional Components Available for Your WaterCop® CLASSIC System

Single and Dual Probe WaterCop® Flood Sensors

WCDFS1 (single probe) and **WCDFS2** (dual probe)

- Battery or AC (optional) powered
- Transmits wireless signal to valve when moisture is detected
- Unlimited number can be used, placed anywhere
- 10' sensor cord, white

Low Temperature Sensor

WCDFST

- Monitors temperature of pipes prone to freezing
- Sends wireless signal to turn off water if low temperature detected
- 10' cord with clip to attach to pipe
- Flood sensor with probe

Water Control Wall Switch

RS100

- Proactively turn water on or off from convenient location
- Lighted display to valve position (on or off)
- Requires category 5E cabling connection to valve (see Wall Switch Interconnect Cable below)

AC Power Adaptor

- For WCDFS1, WCDFS2, and WCDFST sensors
- Eliminates the need for AA batteries

WaterCop® / Wall Switch Interconnect Cable

CBL50 (50 feet) and **CBL100** (100 feet)

- Required to connect WaterCop® valve with Water Control Wall Switch
- RJ45 molded connections for easy installation and durability

Installation Guide

IMPORTANT!

Adherence to all local and municipal building, plumbing and electrical codes as they pertain to the installation of the WaterCop® CLASSIC System is of utmost importance. Codes in some areas may require that a licensed plumber be employed to do the installation, or that the proper permits be obtained prior to any installation. Even if local codes do not require a licensed plumber to do the installation, it is necessary that the installer has a professional level of competence in both plumbing and electrical skills to perform the installation. These instructions assume this level of knowledge and skill. If in doubt, use a licensed professional.

Pre-Installation Testing of WaterCop®

Although each unit is pre-tested at the factory, it is highly recommended that the unit be tested prior to installation to ensure proper operation in your home. Operating the valve before connecting to the water line will not damage it.

Use caution!



CAUTION!

- The valve closes with great force. It could cut off a finger.
- Keep fingers and other items out of the valve when testing.



WARNING! The WaterCop® case is NOT EXPLOSION PROOF. The shut-off valve must NOT be installed where it could ignite flammable vapors or explosive mixtures.



WARNING! To reduce risk of electrical shock, fire, or damage to property or WaterCop®: Do not use extension cords. Use of extension cords can cause fires or electric shock. Install WaterCop® within 20 feet of an outlet or, install an outlet near the WaterCop®. Comply with all local codes.



WARNING! Before opening case, unplug power cord. When case is open, it is possible to contact electrified components. Always unplug the power cord before opening the unit.
Wear eye protection for plumbing and electrical work.



Notice: WaterCop® should be installed downstream of existing shut-off valves and pressure reducers. Install 18" downstream from existing indoor water meters to allow for future meter maintenance.

Manually Test the Valve

To test your WaterCop® CLASSIC System, gently pull the safety plugs out from each end of the valve. Check the position of the valve by looking in either threaded end.

In the open position, you will be able to see through the valve; in the closed position only the shiny surface of the ball will be visible. Place the base of the housing on a sturdy surface, as close as feasibly possible to the location where it will be permanently installed. Plug the WaterCop® power cord into a nearby 120 VAC outlet. The valve position indicator lights should now correspond to the actual position you noticed: Green = Open, Red = Closed. Grasp both sides of the housing (not the valve) with the valve pointing away from you for safety. Being very careful not to have your fingers or other objects near the valve openings, press the colored circle just below the unlit indicator light. You will hear the motor change the valve position. Again, look into the threaded end of the valve to verify that the valve has changed position. **If it appears that the valve has not turned from one position to the other, DO NOT try to reposition the valve yourself by inserting any tool or fingers into the valve.** Operate the valve several more times from open to close, checking each time for proper positioning. If you are experiencing trouble getting the valve to open and shut, call the 800 number listed below.

Manually Test the Flood Sensors

Flood and Temperature sensors require power to operate. Use either fresh "AA" alkaline batteries (not included) and/or a WaterCop® AC Adaptor (sold separately) to power. If both are used, batteries will provide back-up power in the event AC power is lost. Rechargeable batteries are not recommended. To install batteries, remove the battery cover located on the back of the sensor and install batteries in accordance with the (+ and -) placement guide. Reinstall the back plate.

Follow suggestions found in the section titled "Placement of Flood Sensors" for recommendations where sensors should be placed. Locate a wall near the area you choose to monitor.

Avoid high traffic areas where cord or sensor could be stepped on or kicked. Mount transmitter at a convenient location on the wall, two to three feet above the floor. This will help avoid damage to the sensor and provide a strong signal. Use hook and loop fastener included with the unit.

1. Following all safety precautions, make sure that the WaterCop® is plugged in and the valve is in the OPEN position. Leave the WaterCop® near your main water line, on a sturdy surface. It is important that anyone who will be near the valve is aware of the safety precautions, and does not insert any object into the valve, or handle the valve during the test.
2. At one of the locations you have chosen to monitor, drop the sensor probe (not the mounted transmitter) into a cup of water. Hold until you hear the sensor transmit a signal to the WaterCop® (about 5 seconds). The signal will be a series of short beeps followed by a long tone. This test simulates a leak, and lets you check for interference between the sensor and the WaterCop®.
3. Take the sensor out of the water and carefully dry off the sensor and prongs. It should stop beeping.
4. Go back to your WaterCop® and verify that the valve has closed (the red indicator light will be lit).
5. Keeping all objects away from the valve, reset the WaterCop® by pushing the green circle below the OPEN text.
6. Repeat steps 2 through 5 until you have tested each sensor directly in the locations you wish to monitor.

Troubleshooting

- If the flood sensor does not close the valve, check that the sensor has power and batteries and/or AC adaptor are installed correctly.
- If the batteries have power and the wireless sensor still does not make the valve close, physically remove it from its installed location and place it next to the WaterCop® valve. Repeat test. If the sensor operates properly when it is closer to the WaterCop® valve, but not when it is installed in a remote location, try moving the sensor to a different position or try a different wireless sensor. Some possible causes of signal reduction are steel construction, foil-backed insulation or other large metallic barriers. **You may also use a range enhancing repeater (WPR - sold separately) to extend the effective range of the wireless signals.**
- If the unit still does not function properly, check the digital code settings (see instructions for changing digital codes).
- If the code matches the code on the WaterCop® valve, and it still does not function properly, replace the sensor.


Installation of Flood Sensor

Once testing is complete, finish installation of the flood sensors by unwinding the cord and placing the sensor probe on the floor at the lowest point (where water would naturally collect) in the area to be monitored. **Be sure that the sensor is placed FLAT on the floor so water can be detected as soon as it begins to accumulate.** The sensor may be secured to the floor with adhesive dots (included), taking care that the metal probes are not covered. Verify that the transmitter and wire are clear of doors, drawers, sharp edges, or other hazards that may cause damage.

Unplug the WaterCop® after the testing is complete.

The WaterCop® can now be installed.

Prior to installation, read all warnings and precautions carefully.

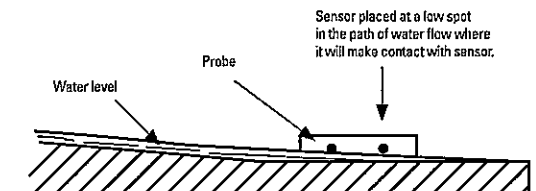

Installation Procedure


Check the contents of the carton with the products listed on the carton label. The shipping package should contain the following:

- 1 ea. WaterCop® with power adaptor (20' cord)
- 1 ea. Owner's Manual/Installation Guide

Note: The package may contain sensors if purchased as part of kit. Read Operating Instructions before any installation is attempted. All sections of this Owner's Manual/Installation Guide should be read and completely understood.

Review Location and Type of Main Supply Line

The main supply line should enter the house in either the basement or a crawl space beneath the first floor. The water main shut-off valve is usually located near where the line comes through the basement wall or just after the water line enters the living area from the crawl space. In apartments, townhouses, and manufactured housing constructions the water main shut-off valve can usually be found in close proximity to the water heater installation. The WaterCop® valve should be installed in the main water line just downstream from the main shut-off valve in your home. The water supply must be shut off prior to installation of the WaterCop®.

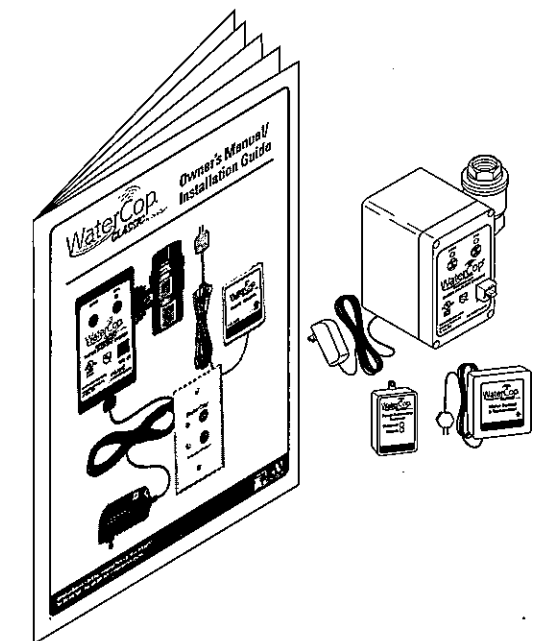

Choose a dry location to install the WaterCop®. The front control panel should be easily visible in order to see what position the valve is in (open/closed) and accessible for resetting after a leak has been detected and corrected, and for checking and resetting the radio receiver code if necessary. Place the valve where the housing is protected from use as a step or other excessive loads. The shut-off valve must be installed:



- In the main water line;
- Just downstream from the main water shut-off valve;
- In a dry location (indoors only);
- Where it is accessible for checking and resetting the valve and for resetting the radio receiver code, if necessary; and
- Where the case is protected from use as a step or other excessive loads.



Caution: Never use the housing for leverage when mounting this unit or tightening fittings. Use a wrench on the valve flats that are provided.



Caution: High heat from soldering or brazing can damage valve seats or motor housing. Proper precautions should be taken to prevent damage from heat when installing the unit. Remove plastic housing before soldering valve in place.

Additional Part Requirements

Installation of the WaterCop® will require additional parts. When the main supply line is cut to accommodate the WaterCop®, new fittings will be needed to connect the ends of the piping to the WaterCop® valve.

The type of connecting fittings to use will be determined by the type of existing piping, local plumbing codes, and "industry standard practices."

The most common material for water supply lines is copper. If the WaterCop® is to be installed in a copper line, you still have a choice of fittings and methods of installation.

Compression Fittings

The unit can be installed with compression fittings using common household tools and basic mechanical ability. You will need:

- | | |
|--|--------------------------------|
| a) 2 fittings (male pipe thread x compression)
available at most local hardware or plumbing supply stores | d) Ruler |
| b) Teflon® tape or other thread sealant | e) Pencil or marker |
| c) Tubing cutter | f) 2 large adjustable wrenches |

Measure the outside diameter of the copper tube and note the valve size to be sure you purchase the proper size fittings for the job.

1. Remove nuts and sleeves from compression fittings and install the fittings into each end of the valve using Teflon® tape or other thread sealant to ensure a watertight seal. Hold one wrench on flats of valve body and use the other to tighten fittings.
2. Measure the distance from end to end of valve assembly. For 1/2" tube (5/8" outside diameter) subtract 1/2", for 3/4" tube (7/8" outside diameter) subtract 3/4" from your measurement. This is the length of the section of tubing to be cut out of the existing line. The piece of existing tubing to be cut out is shorter than the measured length so that tube ends extend into the compression fittings.
3. Select the location for the WaterCop®. Be sure to consider that you will need access to the front panel of the control unit. After cutting the section of tube out of the line, you will need to shift the tube ends to be able to fit the unit into place. Make sure you will have access and room to adjust before you cut the tube.
4. Mark the tube in the location you have selected. Double check the length and location you marked.
5. Turn water off and drain the system.
6. Use tube cutter to cut copper tube at the locations you marked. Careful, there will probably still be some water in the line.
7. Remove any burrs from the tube ends and clean ends.



8. Install compression nuts and sleeves to each tube end.
9. Shift tube ends to install WaterCop® valve in line.
10. Position the unit and tighten compression nuts. Hold the fitting with one wrench while tightening the nut with the other. Tighten both nuts.
11. Plug unit into a proper power source and turn valve to open position (open button / green light).
12. Unplug unit, turn water back on and carefully check for leaks.
13. Tighten fittings if needed to stop any leaks.
14. Plug unit back into power source. Installation is complete.

Solder Fittings

An alternative method is to solder the unit into the water line. This method requires a considerably higher skill level to accomplish the installation properly and safely. If you are not skilled in this area, it is strongly recommended that you contact a professional plumber to do this type of installation.

Electrical Connection

The WaterCop® is supplied with a power adaptor (20' cord) to be plugged into a 120 VAC power source. It is recommended that the WaterCop® not be plugged into an extension cord.

Review "Specification" current and power requirements as not to overload the circuit supplying power.

As with all valuable electronic items; we recommend plugging the WaterCop® Actuator into a surge protector.

Warnings and Precautions



WARNING!

The motorized drive unit case is not capable of supporting any loads. Do not attempt to use the unit as a step. This will cause damage to the unit and could cause personal injury. Do not store highly flammable items such as oily rags or other combustibles near your WaterCop®.



Caution: It is recommended that eye protection be worn while installing or servicing the system. Failure to do so could result in personal injury.



Caution: Do not use the case as leverage when mounting this unit or tightening fittings. Apply wrench to flats on the valve body to tighten fittings.

Changing Digital Codes

Codes on all control units and transmitters are set at the factory and should not require alteration. If you use other wireless products in your home (garage door openers, etc.), there is a slight chance of interference with the signal. The following instructions will aid in resetting the code.

Important Note: All transmitters and the control unit must have the same code setting!


Changing the Receiver Code

Disconnect power to receiver unit by unplugging power cord.

1. Remove cover using the 4 screws located in the corners of the cover.
2. Locate code switch block (see illustration page 12). Switches are numbered 1 through 8.
3. Arrange the switches in any combination (on or off position). Write down the code combination you selected.
Example: 1-on, 2-off, 3-off, 4-on, 5-off, 6-on, 7-off, and 8-off.



- Some WaterCop® receivers may have 6 dip switches. To match codes between 6 and 8 dip switch units, set switches 1-6 exactly the same on both units. Switches 7 and 8 must remain in the "on" or "up" position.
- Reinstall cover. Carefully tuck wires completely into case and hold cover in position while tightening screws.
- Reconnect power by plugging the power cord into power receptacle.

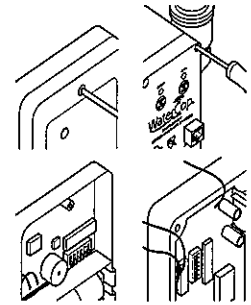

Changing the Transmitter Code

- Remove transmitter cover.
- Locate code switch block. Switches are numbered 1 through 8.
- Arrange the switches in the exact combination as the code that you set in the receiver. It is important that the same exact code be set in the receiver and all transmitters. If the codes differ, the unit will not function properly.
- Some WaterCop® transmitters may have 6 dip switches. To match codes between 6 and 8 dip switch units, set switches 1-6 exactly the same on both units. Switches 7 and 8 must remain in the "on" or "up" position.
- Test each transmitter to ensure that the unit is functioning properly.
- If not, verify that all codes are set the same. When all transmitters are functioning properly, your WaterCop® CLASSIC System is on duty to help protect your home from damage due to plumbing leaks.

WaterCop® Interface Connections


Contacts 5, 6 and 7 are used to control the valve position from a remote location. The most common is your home security system control panel.

This is done by wiring these contacts to a control switch on the panel. The diagram below shows typical installation options. This control can be a relay, push buttons or toggle type switch. This control needs to be a momentary switch, which means that the control switch stays made or "on" for a short period of time (1 to 3 seconds) and then returns to a neutral position.

Contacts 2, 3 and 4 are used to signal a remote device as to the position of the valve. This is done by connecting a low voltage circuit with indicator lights to these contacts. The diagram shows a typical installation.

When the valve is in the closed position, contacts 2 and 3 will be made completing the circuit and lighting the indicator light, showing that the valve is in the normal open position.

When the valve is in the open position, contacts 3 and 4 will be made completing the circuit and lighting the indicator light, showing that the valve is closed.

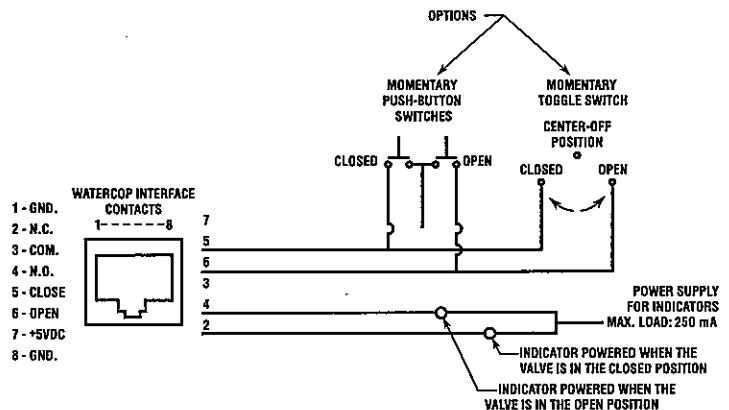

Emergency Procedures

In the unlikely event that the WaterCop® CLASSIC System should shut off the main water supply and then become inoperable due to a power outage or damage, it is possible to manually operate the WaterCop® to return water service. Unplug the WaterCop® from its power source. The valve may be manually opened by removing the clip holding the housing to the valve, sliding the housing off the valve shaft, and turning the valve shaft a quarter turn with a screwdriver.

This procedure should only be necessary in emergencies.





DynaQuip Controls Corporation
10 Harris Industrial Park, St. Clair, MO 63077
(800) 545-3636 www.watercop.com

Limited Warranty

DynaQuip Controls Corporation, 10 Harris Industrial Park, Saint Clair, Missouri 63077, warrants its WaterCop electric valve actuator and electronic sensor and electronic system control components against defects in material and workmanship for a period of two (2) years from the date of original purchase. DynaQuip Controls warrants its WaterCop brass ball valve mechanical component against defects in material and workmanship for a period of five (5) years from the date of original purchase. In the event that such defects appear within the warranty period, DynaQuip Controls will, at its option, and upon written notification thereof and substantiation that, the product(s) have been stored, installed, maintained and operated in accordance with DynaQuip's recommendations and standard industry practice, repair or replace the product without charge. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation, physical damage, modification, or disassembly at any place other than the point of original manufacture. This shall constitute the exclusive remedy for breach of warranty, and DynaQuip Controls shall not be responsible for any incidental or consequential damages, including, without limitation, damages or other costs resulting from labor charges, improper installation, unlicensed installation, building code violations, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemicals, weather, or any other circumstances over which DynaQuip Controls has no direct or immediate control. DYNQUIP CONTROLS MAKES NO OTHER WARRANTIES EXPRESS OR IMPLIED EXCEPT AS PROVIDED BY THIS LIMITED WARRANTY.

The seller does not represent that the product; will completely prevent any property loss or damage caused by sudden or accidental discharge of water from plumbing supply and/or drain systems into areas of a residential and/or commercial property; may not be compromised or circumvented; or that the product will in all cases provide immediate and adequate warning or protection. Buyer understands that a properly installed and maintained automatic water shut-off system; may only reduce the risk directly associated with sudden and accidental water loss events, may still result in significant water damage to property, and is not considered loss or casualty insurance or a guarantee that such will not occur, or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO TURN OFF WATER SUPPLY OR GIVE WARNING OF A POTENTIAL WATER LOSS EVENT. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT, WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST THE SELLER. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. No increase or alteration, written or verbal, to this warranty is authorized.

DynaQuip Controls Corporation reserves the right to change or improve the design of any DynaQuip Controls manufactured product without assuming any obligations to modify product previously manufactured or sold.



!!!ATTENTION!!!

THE LIMITATIONS OF THIS AUTOMATIC WATER SHUT-OFF SYSTEM

While this is an advanced design automatic water shut-off system, it does not offer guaranteed protection against sudden or accidental discharge of water from a plumbing system. Any automatic water shut-off system, whether commercial or residential, is subject to compromise or failure to warn or activate for a variety of reasons. Examples may include:

- Water intrusion from sources external to the plumbing supply system such as; gravity drain systems, rain, hurricane, storm water, sewer back-up, swimming pools, spas, thawing snow and ice, ice dams, HVAC condensation, freezer defrosting, softener recirculation cycles, etc.
- Electronic water shut-off valves, water leak and intrusion detectors and sensors, and many other automated sensing devices will not work without electricity. Battery operated devices will not work without batteries, with dead or insufficiently charged batteries, or if the batteries are not installed properly. Devices powered solely by AC power will not function properly if their AC power supply is interrupted, however briefly, or cut off for any reason.
- Radio signals sent by wireless transmitters may be blocked, reflected, or degraded by metal or other significantly dense building or construction materials and can significantly reduce transmission range or proper end-to-end device communication. Even if the signal path has been inspected during a regular testing procedure or process, interference or degradation can occur if a metal object or other significantly dense building or construction materials are moved into or added in the vicinity of the signal path(s). Regular testing of wireless communications is strongly recommended.
- Sudden and accidental water leaks from plumbing supply systems can occur at anytime and at any point in a water supply line system. Sensor placement and testing is critical to achieve best performance in water leak detection. Leaks that occur in unmonitored areas will not be quickly detected or may not be detected at all by the leak detection system.
- This equipment, like other electrical/electronic devices, is subject to component failure. Even though this equipment is tested at the factory prior to shipment and designed to last as long as 20 years when properly maintained, the electronic components could fail at any time.
- As with other electrical/electronic devices, power surges, spikes, and brown-outs can cause circuitry to suddenly malfunction and/or fail. Effective surge protection is necessary to avoid potential damage to the electronics of this system.
- The automatic valve is designed to provide positive shut-off of the plumbing water supply when connected to uninterrupted, live AC power. However, if the valve becomes corroded or blocked due to normal sediment, scale, or other internal water line material build-up, the valve may not function properly when needed. A regular valve testing procedure is strongly recommended.


The most common reason an automatic water shut-off system fails to perform when needed is due to inadequate maintenance. We strongly recommend that this system be tested at least monthly to verify that the system and all its components and accessories are working properly.

An automatic water shut-off system is not intended to substitute for adequate property insurance or proper home or facilities maintenance.

WaterCop Interface to Security Panels



WPC Interface Contacts

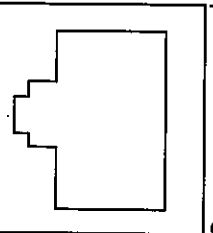


- 7 Brown/White (5VDC)
- 5 Blue/White (To Close)
- 6 Green (To Open)
- CAT5-E CABLE**
- 3 Green/White
- 4 Blue
- 2 Orange

RJ45 SOCKET

1	2	3	4	5	6	1	2	1	2	1	2
+12V	2	3	4	5	6	12V	RLY	ALARM	TROUBLE	1	2
+	REMOTE VALVE										

Dry contact closure signal to security panel during alarms.

An alarm is a water shut-off due to a sensor detecting water and activating the system. There is no alarm signal if the valve is closed by an input from the security panel or the WaterCop panel.

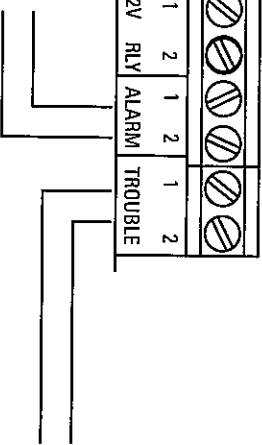

DynaQuip Controls • 10 Harris Industrial Park • St. Clair, MO 63077
 Tel. 800-545-3639 • Fax. 636-629-5528 • www.watercop.com

Input Signals from Security Panel to Change Valve Position
 Apply momentary dry contact closure between lines 5 and 7 to close the ball valve.
 Apply momentary dry contact closure between lines 6 and 7 to open ball valve.


Output Signals to Security Panel for Valve Position
 Dry contact closure between lines 3 and 4 indicates valve open.
 Dry contact closure between lines 2 and 3 indicates valve closed.

WPC/WPCH Output Signals to Security Panel

Dry contact closure signal to security panel during alerts.
 An alert is a problem with a sensor. A probe is shorted, open or low battery is detected. Water is not shut-off.

TO MOUNT ACTUATOR TO VALVE

1. Make sure the valve and motor control box are both in the 'OPEN' position.
 - a. The slot in the valve stem should be in line with the valve body, end to end.
 - b. Apply power to the control box. The green light should be 'ON'. If not, press the green button and the unit will cycle to the 'OPEN' position. Disconnect power.
2. Place the spring clip around neck of the valve as shown.
3. Place O-Ring into valve mounting recess
4. Slide the valve onto the mounting pins in the position shown.
IMPORTANT: The control box **MUST** be aligned with the valve as shown.
5. Secure by compressing the spring clip and sliding it to the inside of the mounting pins.
6. Release clip. Make sure the clip is inserted into the groove in all four mounting pins.

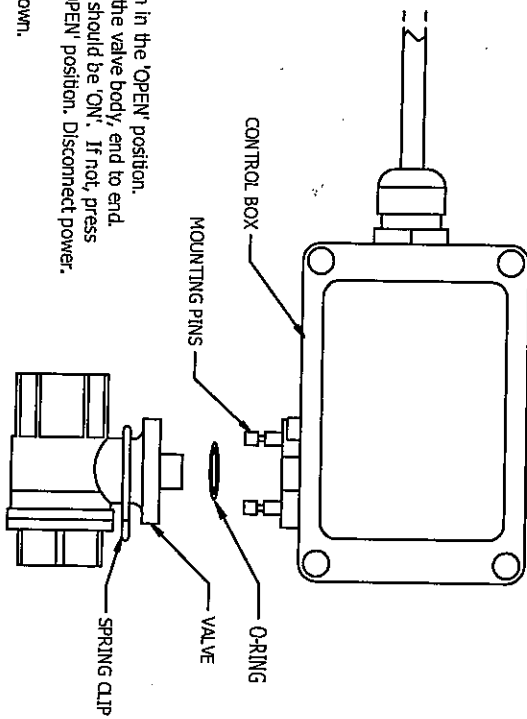

WaterCap is a registered trademark of DynaQuip Controls Corporation
DynaQuip Controls Saint Clair, MO 63077
www.watercap.com

192172
REV C